

INVOLIGHT

**BM100W
POWER BUBBLE MACHINE**

USER MANUAL

Please read over this manual before operation the machine ☺☺

Introduction

Thank you for choosing this Bubble Machine. You own a rugged and powerful state-of-the-art machine. Prior to use, we suggest that you carefully read all of the instructions. By following the suggestions found in this user manual, you can look forward to exceptional performance from your Bubble Machine for years to come.

Please follow these operation, safety and maintenance instructions to ensure along and safe life for your Bubble Machine.

Specifications:

Model No.: BM100W

Remote Control

Power: 60W

Weight:: 3kg

Bubble Oil Container: 0.6L

Bubble output: 50 cubic meters

Voltage: 110V, 220-250V 50/60Hz

Size: 25x24x22

Unpacking & Inspection

◆ Open the shipping carton and check that all equipment necessary to operate the system has arrived intact. In addition to the bubble machine, you should receive the following items:

1. This user manual.
2. A set of remote control.

◆ Before beginning initial setup of your Bubble Machine, make sure that there is no evident damage caused by transportation.

◆ In the event that the unit's housing or cable is damaged, do not plug it in and do not attempt to use it until after contacting your dealer for assistance.

Setup

1. Remove all packing materials from the bubble machine.
2. Place bubble machine on a flat surface.
3. Loosen the side screws and lift the housing upwards. You will see a liquid tank.
4. Pour bubble liquid into the liquid tank, being careful not to exceed the maximum fluid level. Do not overfill.
5. When the container is full, lower the housing and tighten the screws.

IMPORTANT SAFETY NOTICE:

◆ Ensure your bubble machine is unplugged from the mains electrical supply before attempting to open the housing.

◆ To help avoid accidental exposure to dangerous live AC mains voltage, two safety screws are fitted that require a screwdriver to remove. Once these are removed, the finger screws can be undone by hand.

◆ Once the screws are removed, the lid of the housing can be carefully swung upwards, as shown above. Take care not to spill any of the bubble fluid inside the unit.

◆ The fluid tank is designed to fit only one way around. Make sure you insert it correctly, as shown above, with the lower edge facing into the machine.

◆ Never aim the output at open flames.

◆ Position output of bubbles away from persons

OPERATION

Turn on the power switch located on the back of the bubble machine. You will notice that the internal bubble drum and fan are activated. Bubbles are now produced.