

INVOLIGHT

**SM1000
POWER SNOW MACHINE**

USER MANUAL

Please read over this manual before operation the machine 

Thank you for using snow machine. In order to offer you long and satisfied service, to make sure of the safe, reliable, longlast use, so suggest you read this instruction before use. **CE**

1) Characteristic

1. Strong stream can spray the snow in distant.
2. Two types of heater, the quantity of the snow can be adjusted.
3. Distant circuitry control (<=10M)

2) Information

Type: SM1000	Voltage: AC220V 50Hz
Heater: 1000W	Fuse : 250V 6.3a
Tank capacity: 5L	Size: L54*W25*H28.5
Weight: 12KG	

3) Attention

1. Used in door.
2. Stop the machine if nobody is with it. No child is allowed to close.
3. Please use the high quality snow water (oil), egg: ARPPORO
4. Don't spray the water directly to people
5. Power off before the snow water is used up.
6. A certain noise is within common range when the machine is working.

4) Operation

1. Open the carton to check whether all necessary apparel parts include accord the specification list. Please contact distributor if there is something missed.
2. Open the cover of the liquid can put the special snow water into the can.
3. Using a standard two-core signal circuitry to connect the control box, the main control and the sub-control. As follow;
4. Connect the power line to the power socket with earth line. Turn the switch at "On" and the machine heat. The red LED (power on/off) of line console will light once the machine finish heat.
5. Turn the switch of the (Snow on/off) to "on", the green LED will light (in use), the snow come out.
6. Adjust the switch (Output volume) to control the quantity of the snow.

7. Hanger the (output volume switch) to adjust the speed of the air pump, of two kinds: MIN.MACX

5) Repair:

1. After about 40 hours continually use, please use 2-4L pure water to clean the inner pipe.
2. Changes the snow water to a new one after long time no use.
3. If the snow is small or stop working,
Power off at once; check the power line, the fuse.
Take off the control line; check the connection of the line.
Check the remains of the snow water.
Check the inner part of the spray, make sure whether it is stopped or damaged.
If there are other problems, turn to the professional people or contact with the distributor.

6) List of the package;

1. Snow machine: 1pcs
2. Control box: 1pcs
3. Flying rings: 1pcs
4. Instruction: 1 piece

